Decorative

PRODUCT CATALOG





Decorative slats

Slats are a decorative novelty in the interior design. Their minimalist design will find its application in any interior style. Slats are perfect as a single wall decoration, decorative openwork wall or as a ceiling decoration. Due to the fact that slats are available in many sizes and wide range of colors - you will choose the perfect slats for yourself! By using our slats you can change your interior in quick and modern way!

Wall panels

Slats are made with uniqe attention to every detail. The slats are produced from the highest quality MDF with a durable four-sided laminate. The slats protect the walls against damage or dirt and they are easy-to-clean. Decorative slats are an excellent decoration for residential buildings, offices or public spaces. The possibilities of using our decorative panels are very wide. They can create a wall or ceiling composition, an openwork wall or any type of partition. The slats assembly is quick and very durable. The slats can be mounted with strong montage glue.







Modern **design**

Thanks to their simplicity, the slats fit into any interior style! It is the perfect wall finish in modern or rustic interiors.



Four-sided laminate

Thanks to the fact that the slats are laminated on all the four sides, you can mount them with any side to the wall or create a partition.



Easy to **assemble**

Wall slats are mounted with montage glue. Assembly is just 5 simple steps! - check the assembly instructions.



Elegence and modernity


A novelty on the market - decorative panels with grooves that combine modern design with timeless elegance. Each panel consists of five half-slabs (grooves), which create a harmonious and stylish surface. Thanks to their form, they fit perfectly into both modern and classic interiors, emphasising the character of any room. The panels are flexible thanks to their felt base, which allows them to fit perfectly even to irregularly shaped walls.

The panels are extremely easy to install - simply glue them on, making the whole process quick and hassle-free. The richness of colours and the high quality of workmanship make these decorative panels suitable for any design style - from minimalist to more classic interiors. White LAMEO_R010



Cashmere LAMEO_R027



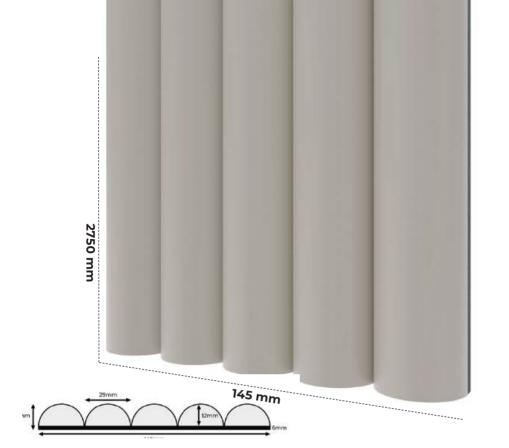







Configure your panel

Slatted panels combine modern design with practical acoustic properties. Thanks to the slats mounted to the felt or HDF board, the panel perfectly absorbs sound waves in the room eliminating the echo effect. Each panel has six slats and is 30cm wide and 275cm high. The panels are extremely easy and quick to install. Simply cut them to the correct height and stick them to the wall or ceiling. In addition, the panels can be screwed to the wall with black screws. The slats are a timeless decoration for any interior!



Available panel backgrounds:



Unicolors:



White matt 300x2750 [mm] LAMEO_F110

F

-



Anthracite 300x2750 [mm] LAMEO_F112



Black 300x2750 [mm] LAMEO_F113




Bottle green 300x2750 [mm] LAMEO_F120



Powder pink 300x2750 [mm] LAMEO_F123



Gold 300x2750 [mm] *LAMEO_F114*

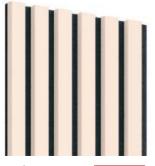

Beige 300x2750 [mm] LAMEO_F126









Grey 300x2750 [mm] *LAMEO_F125*

Wood colours



Oak veneer* 300x2700 [mm] LAMEO_F101



Sonoma oak 300x2750 [mm] LAMEO_F102



Natural oak 300x2750 [mm] LAMEO_F103



Wotan oak 300x2750 [mm] LAMEO_F107



Artisan oak 300x2750 [mm] LAMEO_F108



Walnut 300x2750 [mm] LAMEO_F105



Dark oak 300x2750 [mm] LAMEO_F109



Panel dimensions:






ame



The 60x60cm acoustic panels on felt allow walls of any size to be covered. This makes the panels ideal for high rooms. The panels can be arranged in any orientation and create geometric patterns. They are available in seven different decors. They are perfect for any room in your home. The panels do not require They are simple and easy to install!

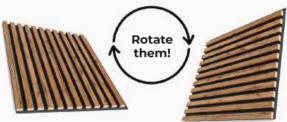

How to install wall panels!

Installation instructions:

- Put the mounting glue on the panel
 Glue the panel to the wall
- 3. Continue installing the next panels



Veneered panels

2400x600mm, 2800x600mm, 2400x280mm, 2800x280mm

Acoustic panels are a great option for people who are looking for something original and timeless to suit their interiors, whether installed in an office or a private home.

Veneer acoustic panels are manufactured from natural veneers. We offer eight colour variations of the veneered panels. The slats are made of black MDF covered on one side with natural veneer. The entire panel is constructed on sound-absorbing, high-grit felt.







Wood in a modern form



Wall slats Natural oak

Decorative slats in natural oak color are the perfect solution for wood lovers in interiors. They perfectly fit in with wooden furniture or floor in any room. With their use, you will make a decorative wall behind the TV or the bed. You can glue the slats to the wall with both side: the narrower and wider. Natural oak-colored slats are laminated on four sides. Thanks to this, you can create not only a wall decoration, but also an openwork partition wall and their assembly is extremely easy.



- Index: LAMEO_003
- Dimensions [mm]: 30x40x2750
- Color: natural oak
- Lamination: four-sided





Oak veneer* 30x40x2700 [mm] LAMEO_001



Wotan oak 30x40x2750 [mm] LAMEO_007



Dark oak 30x40x2750 [mm] LAMEO_009






Sonoma oak 30x40x2750 [mm] LAMEO_002



Artisan oak 30x40x2750 [mm] LAMEO_008



Walnut 30x40x2750 [mm] LAMEO_005

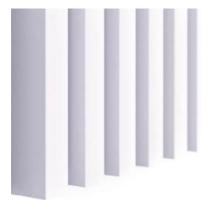

White mat 30x40x2750 [mm] LAMEO_010








Cashmere 30x40x2750 [mm] LAMEO_027

New!!





Anthracite 30x40x2750 [mm] LAMEO_014

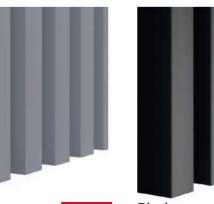

Grey 30x40x2750 [mm] LAMEO_025

New!

Black 30x40x2750 [mm] LAMEO_013

Slats MINI



Oak veneer* 16x30x2700 [mm] *LAMEO_101*



Sonoma oak 16x30x2750 [mm] LAMEO_102




Natural oak 16x30x2750 [mm] LAMEO_103








Walnut 16x30x2750 [mm] LAMEO_105

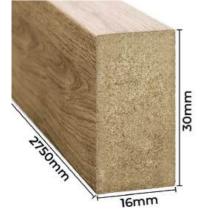

Wotan oak 16x30x2750 [mm] LAMEO_107 Artisan oak 16x30x2750 [mm] LAMEO_108

The mini slats are an option for those who want to fill their interior with panels without reducing their space. Due to their size, the laths are light and do not take up much space. The laths are available in 14 laminated decors and as a natural oak veneered variant. The laths are laminated on four sides, so they can be fitted to the wall or ceiling with any side.

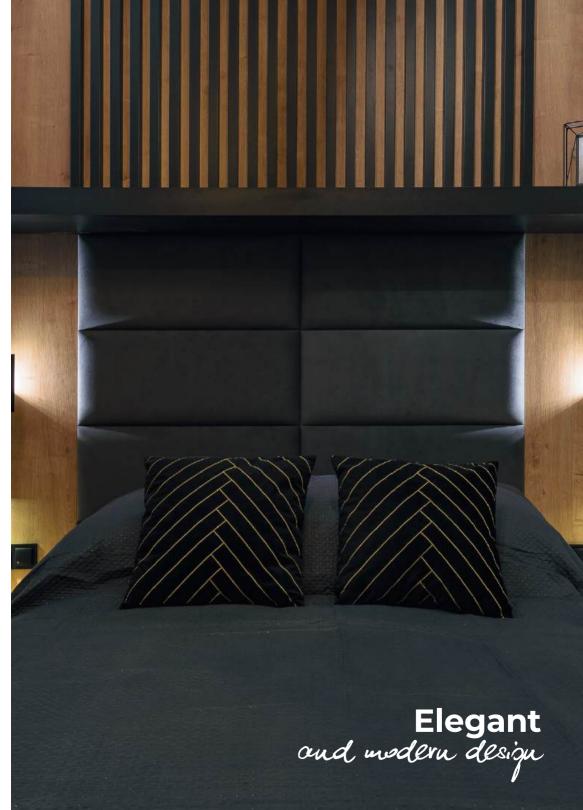

Modern rall design







Anthracite 16x30x2750 [mm] LAMEO_112



Black 16x30x2750 [mm] LAMEO_113





New!

Gold 16x30x2750 [mm] *LAMEO_114* Cashmere 16x30x2750 [mm] LAMEO_127



Beige 16x30x2750 [mm] LAMEO_126 New!



Bottle green 16x30x2750 [mm] LAMEO_120



Grey 16x30x2750 [mm] *LAMEO_125*



Powder pink 16x30x2750 [mm] LAMEO_123

Openwork oak



Natural oak 22x70x2750 [mm] LAMEO_703



Artisan oak 22x70x2750 [mm] LAMEO_708



Sonoma oak 22x70x2750 [mm] LAMEO_702



Walnut 22x70x2750 [mm] LAMEO_705



Openwork wall

You can easily create an openwork partition wall from openwork slats. To assemble it, you will need furniture pegs and a sizing screw.



Wotan oak 22x70x2750 [mm] LAMEO_707



White matt 22x70x2750 [mm] LAMEO_710



Black 22x70x2750 [mm] LAMEO_713


Openwork

Painting strips 16x30mm 30x40mm 10x70mm




Slat 30x40

LAMEO_000

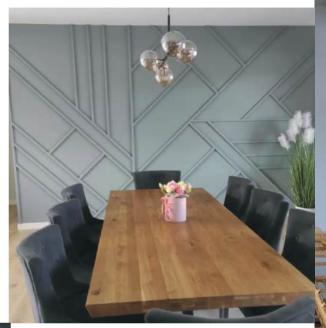



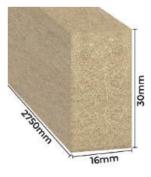



16x30x2070 [mm] LAMEO_100



Black or white?





Strip between the slats BLACK LAMEO_07 Strip between the slats WHITE LAMEO_02

Strip between the slats **NATURAL OAK** LAMEO 04

Instructions installation of slats



Use tools to cut the slats to the suitable length. Use a miter saw or hand saw and a miter box as tools.



Apply MAMUT mounting glue or TESA tape to the slat. The glue should be applied to the slat every 10 cm. One glue is enough to install 12-16 strips from the classic collection.



Glue the slat to the wall keeping it vertical. Remember that the first strip affects the entire composition!

Accessories installation







Saw and bevel

Glue gun

MAMUT glue 290ml



Use the distances to determine the distance betweet the next slat. Use previously cut strips as spacers. To hide the unevenness of the wall, you can use masking slats between the slats.



Continue with the installation of the slat by using the spacers or by installing more masking slats between the slats.



video



